

# Preparation guide before powering on the Tandberg LTO Autoloader

---

This autoloader has the "**Transporter Locking Screw**" located at the left side of the autoloader that prevent the transporter mechanism from transferring. You must remove it before powering on the autoloader.

## (1) Removal of the "Transporter Locking Screw" and "Instruction TAG"



Figure 1-1

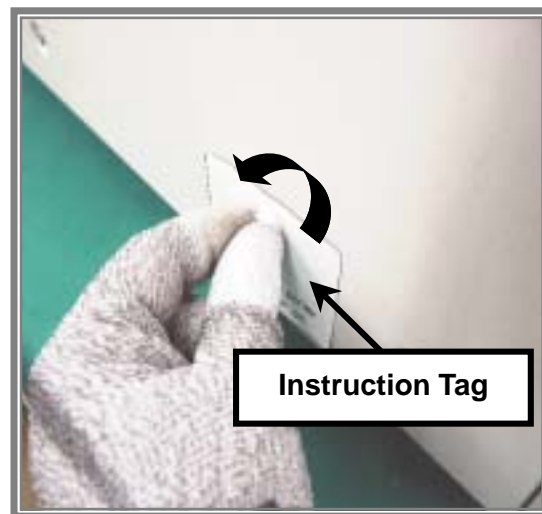


Figure 1-2

Remove the "**Transporter Locking Screw**" which is a type of thumbscrew located at the left side of the decorative cover. (Figure 1-1)

To loose this screw, turn it counterclockwise by hand. (Figure 1-2)

And Remove the "**Instruction TAG**" with the "**Transporter Locking Screw**".

## (2) Save the "Transporter Locking Screw"

Save the "**Transporter Locking Screw**" with all the original packing materials.

And, use the "**Transporter Locking Screw**" to lock the transporter in case you need to ship or move this autoloader later.